

## OPERATING INSTRUCTIONS MODELS XR150/XR350/XR550 SERIES PANELS

### **NORMAL STANDBY CONDITION**

When the system is in the normal standby condition, the keypad shows either the time of day or a blank display.

### **ALARM CONDITION**

When the system is in an alarm condition, the keypad display shows the violated zone name(s) followed by an alarm display.

### **ALARM SILENCE**

To silence the alarm while the bell or siren is sounding, enter your code number and press the COMMAND key. This silences the alarm but does *not* cancel any alarm reports to the central station.

### **RESETTING DETECTORS**

To reset a smoke or other detector, enter the User Menu by pressing the COMMAND key until MENU? NO YES appears in the display. Press the top row key under YES. The display shows ENTER CODE: -. Enter your code number and press COMMAND. The keypad display now shows ALARM SILENCE? if your code allows. Press the COMMAND key until SENSOR RESET? appears in the display. Press any top row key.

### **TROUBLE CONDITION**

When a device is in a trouble condition, the keypad tones and displays the zone or device name followed by TRBL. Press any top row key to silence.

### **SYSTEM TESTING**

You should test the security system weekly to ensure proper operation. If your user code allows, you can do this through a function in the User Menu. After entering the User Menu, press the COMMAND key until SYSTEM TEST? displays. Press the left most top row Select key. The system bell, battery, and communication to the central station receiver system is then tested.

### **ALARM SERVICE**

If service is required for this system, please contact:

Company \_\_\_\_\_

Address \_\_\_\_\_

Telephone \_\_\_\_\_

The operating instructions above should be attached to the front, or framed and located adjacent to, the panel or a keypad with an alphanumeric display.