



IntelliKnight 5820XL Basic Operating Instructions

These instructions must be framed and displayed next to the 5820XL panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems.

Operation	Keystrokes
Silence Alarms and Troubles	Press silence then rotate the key or enter a code
Reset alarms	Press reset then rotate the key or enter a code.
Conduct a fire drill	<ol style="list-style-type: none"> 1. Rotate the key or Enter the installer code. The panel will automatically go to the main menu. Press 1. 2. Press 1 to select Fire Drill. 3. Press ENTER to begin the drill. To end the drill, press any key. <p>To conduct a fire drill from a remote fire drill switch: Activate the switch to begin the drill; de-activate the switch to end the drill.</p>
View alarms and troubles	<p>When the system is in alarm or trouble, press ▼ to view location and type of alarm or trouble.</p> <div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 5px; background-color: #e0e0e0;"> <pre>Alarm FS [1] Alarm CO [1] Press ↓ For Status</pre> </div> <div style="border: 1px solid black; padding: 5px; background-color: #e0e0e0;"> <pre>ALARM: MAN_PULL ZONE_1 MODULE 34 CKT_6 FS: a CO: a</pre> </div> </div> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> <div style="text-align: center;">Alarm Supr Trib</div> <div style="text-align: center;">Alarm Supr Trib</div> </div>
View status of point	<ol style="list-style-type: none"> 1. Rotate the key or Enter the installer code. The panel will automatically go to the main menu. Press 2. 2. Press 2 for Point Status. 3. From the list that displays, select the 5815XL module where the point you want to view is located. The screen that displays tells the status of the point including whether detector sensitivity is in compliance (see below).
Check detector sensitivity	<ol style="list-style-type: none"> 1. Rotate the key or enter a code then press ENTER to access the menu. Press 2. 2. Press 2 for Point Status. 3. From the list that displays, select the 5815XL module where the point you want to view is located. 4. The fourth line of the display shows the sensitivity status. "NORMAL" means the detector is in compliance with NFPA 72. "CAL MAINT" means the detector is in compliance with NFPA 72 but maintenance should be performed soon. "CAL TRBLE" means the detector is not in compliance with NFPA 72.
Set time and date	<ol style="list-style-type: none"> 1. Rotate the key or enter a code then press ENTER to access the menu. Press 4. 2. Make changes in the fields on the screen as necessary. 3. When the time and date are correct, press ENTER.
Enable / Disable point	<ol style="list-style-type: none"> 1. Rotate the key or enter a code to access to access Main Menu. 2. Press 2 to select Point Functions. 3. Press 1 for Disable / Enable Pt. 4. Press 7 for Disable / Enable Pt. 5. Use the ▼ or ▲ to move through the list. Then press ENTER to select the module where the point you want to disable/enable is located 6. Enter the point or circuit number that you want to disable/enable. 7. Press the right arrow key to toggle between NORMAL (enable) or DISABLE.
View event history	Rotate the key or enter a code then press ENTER to access the menu, then press 3 to select Event History. Events will display in date order, with most recent events displaying first.
For Service Call:	